


GJALLARHORN

COMPACT SPEAKER AMP

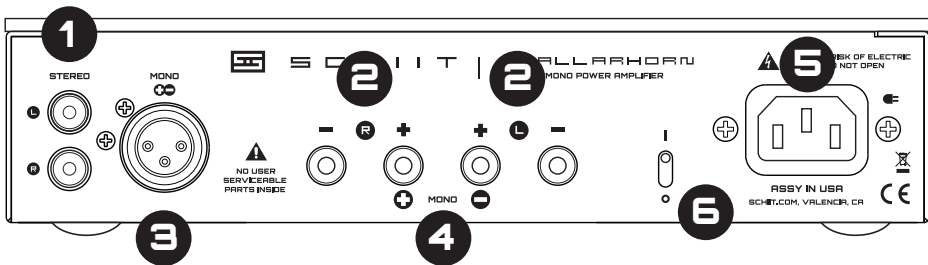

CONNECTIONS

STEREO

1 Connect a stereo source to the RCA jacks. Connect both left and right channels with good RCA cables. Don't connect anything to the XLR socket.

2 Connect both left and right speakers.

Use good-quality, banana-terminated cables for this. "L" is left, and "R" is right. Black is ground, red is hot. Simple as that.

MONO

3 Connect a mono balanced source to the XLR jack. You'll need a good XLR cable. Don't connect anything to the RCA inputs.

4 Connect one speaker to the two center jacks. "+" is positive, "-" is negative. Both are active. Don't short the negative sides together, or the amp may go into protection. More on this later.

POWER

5 Connect the power cord here. The amp won't work wirelessly without power; we're not Nikola Tesla or anything fancy like that.

6 Turn the amp on and off with this switch. There will be a short delay, about 10 seconds, until the relay clicks in. And then you'll have music!



GJALLARHORN



1

OPERATION

1 When the amp is on, this LED is lit. When it's off, the LED is off. Simple as that.

PROTECTION

Gjallarhorn includes internal protection against over-current, over-temperature, and excessive DC.

If Gjallarhorn clicks and mutes, it has gone into protection mode. Gjallarhorn's protection will reset automatically in a few seconds. Check the following:

Are speaker cables shorted? Shorted cables will cause Gjallarhorn to go into protection.

Is there a speaker problem? Sometimes, speakers can short internally. Check with a voltmeter or try a different pair of speakers.

Are you using low-impedance, inefficient speakers? Gjallarhorn may protect with very low impedance or inefficient speakers.

Are you listening very loudly? Gjallarhorn is a capable amplifier, but it's best on the desktop or in a small room. If you need a ton of power, Vidar is a better choice.

IN THE BOX

- (1) Gjallarhorn
- (1) Power Cord

(Infinite) Appreciation from the whole Schiit crew in Valencia, CA and Corpus Christi, TX



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS DEVICE TO RAIN OR MOISTURE.



This product is in compliance with standards and regulations of the European Community.

WARRANTY

Schiit Audio warrants to the original purchaser that this product shall be free from defects in material and workmanship for five (5) years from the date of purchase. If a defect covered by this warranty occurs during this period, Schiit Audio will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. Schiit Audio products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@schiiit.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonable use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 5 years. In no event shall Schiit Audio be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some states do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.

SCHIIT.COM
INFO@SCHIIT.COM

