



FUSION ARCHITECTURE HEADPHONE AMP & PREAMP

LYR+ GIVES YOU THE ULTIMATE CHOICE:

TO GO WITH OR WITHOUT TUBE!

NO TUBE? LYR+ SWITCHES TO ITS INTERNAL MOSFET GAIN STAGE.

WITH TUBE? LYR+ SWITCHES TO THE TUBE GAIN STAGE—

AND YOU CAN PICK YOUR MODE WITH REMOTE CONTROL.

OH, AND DID WE SAY REMOTE? AND RELAY LADDER VOLUME?

LYR+ IS THE MOST ADVANCED COMPACT PRODUCT WE'VE MADE, EVER.

OWNER'S MANUAL

INTRODUCTION

Lyr+ is the most advanced desktop-sized product we've ever produced. Combining all-new Fusion Architecture™ that lets you use tube or solid state gain, relay ladder volume control, advanced microprocessor protection, and remote control, it's a technological tour de force. Now, you can roll all the tubes you want...and still have a great solid-state amp whenever you want. We hope you enjoy your time with Lyr+—we certainly had plenty of fun developing it!

WHAT'S IN THE BOX

- (1) Lyr+
- (1) Lyr+ Tube Cover
- (1) Power cord
- (1) 6SN7 type tube (if you ordered it with Lyr+)



The following is required by the roughly 9,542 government agencies and regulations we have to comply with. If you have some common sense, they

should seem pretty straightforward. In any case, read these instructions before proceeding farther, follow all instructions, and heed all warnings. Or else!

- 1. If you don't know how to install audio devices, get a qualified professional to help.
- 2. Never use this device near water, and clean only with a dry cloth.
- 3. Assure adequate ventilation, do not block any ventilation openings, or place near heat sources.
- 4. Use only the supplied power cord or suitable replacement. Route cords away from traffic areas and protect them from being pinched. Unplug the cord from the outlet if the apparatus is unused for a long period of time.
- To prevent electric shock, do not use the plug with an extension cord, receptacle, or outlet unless blades can be fully inserted.
- 6. Refer all servicing to qualified service personnel. Service is required when the device has been damaged, including cord or plug damage, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.




WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS DEVICE TO RAIN OR MOISTURE.

GETTING STARTED

No Tube? It's easy. Just plug in Lyr+ and turn it on. It'll stay muted while everything stabilizes, then enable everything for you to enjoy.

If you aren't going to use a tube for a while, you can cover the hole with the supplied Tube Cover.

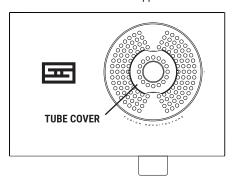

Yes Tube? It's still easy. Just follow these steps:

1. Before plugging in, insert the tube. Carefully align the key in the tube base to the notch in the tube socket.

2. Ensure tube is well-seated. Push down firmly until the tube is seated on the tube socket.




- **3. Plug in and turn on.** The tube will glow after a few seconds, then Lyr+ will stay muted for self-checks, then enable output.
- **4. Connect your system.** Plug in up to two sources, plug in your headphones, and, if you like, use the preamp outputs for a speaker amp or sub. **And enjoy!**

Replacing or Swapping Tubes

- 1. Turn off and unplug. Wait for the tube to cool.
- **2. Carefully extract the tube** by gently rocking it back and forth and pulling upwards.
- 3. Carefully insert the replacement tube. Align the key to the notch and press down firmly until the tube is seated.
- 4. Plug the Lyr+ back in and turn it on.

CONTROLS

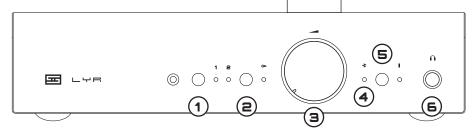

- 1 Input Select. Press this button to toggle between the two inputs. To the right of the button, the selected input lights up to indicate, well, the selected input.
- **2 Preamp Output Enable.** Push the button to enable and disable the preamp output. The light to the right of the button is on when the preamp outputs are enabled.
- **3 Volume Control.** Turn up till the music sounds good, but before your ears turn to taffy.
- **4 Mode Indicator.** When this light is on, Lyr+ is using its internal solid-state gain stage. When it's

off, then it's running tube gain. Remember, you can't run tube gain without a tube!

5 Gain Select. Push this button to toggle between low and high gain modes. The light to the right of this button will glow when Lyr+ is in high gain mode.

 
Note: You can also press and hold the gain switch to change modes. Press and hold for 4 seconds. When you release the button, it will switch modes (from tube to solid state or vice-versa).

6 Headphone Jack. Plug your headphones in here, using a standard 1/4" TRS plug.


REMOTE CONTROL

Yes, Lyr+ comes with a remote control. And yes, we know it may seem kinda silly if you're using Lyr+ on your desk, but when you're using it as the focal point of an entire system, well, maybe it's not so crazy, right?

- **1 Input.** Press this button to select the input you want to listen to. If you skip the input, keep pressing—it cycles back around.
- **2 Tube/MOSFET Mode.** When you have a tube installed, you can switch back and forth between tube and MOSFET gain modes by pressing this button. If you don't have a tube installed, this button won't do anything.
- **3 Gain.** Toggle between low and high gain with this button. We recommend turning down the volume before switching to high gain, as it is significantly higher than low gain.
- **4 Mute.** Press to mute Lyr+—headphone, preamp outs, everything goes off.
- **5 Preamp Output Enable/Disable.** Press to enable or disable the preamp outputs.
- **6 Volume Up/Down.** Press the up arrow to turn volume up, press the down arrow to turn it down. Simple!



CONNECTIONS

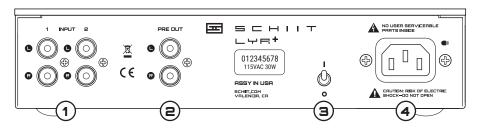

1 RCA Inputs.

Connect up to 2 inputs to Lyr+ using RCA cables. The inputs are conveniently numbered "1" and "2" to match the front panel indicators. Select the input you want to listen to using the front panel button or the remote control.

2 Preamp Output.

Optionally, connect this output to a separate power amp (or subwoofer) using RCA cables. You can switch on and off the preamp output using the front panel button or the remote control.

- **3 On-Off Switch.** Up is on. Down is off. Pretty simple, right?
- **4 AC Input.** Plug the power cord in here. Plug the other end into an outlet of the correct voltage. Trying to run a 115V product on 230V will blow the fuse and generally make for a bad, bad day.



There's no sound for quite a long time after I turn Lyr+ on.

That's perfectly normal. Lyr+ monitors operational parameters as it is turning on, and only connects the output when everything is fine. This can take 30-45 seconds.

There's no output for a while after I switch gain. Correct. And completely normal. Lyr's microprocessor protection system mutes the output while it changes gain, and monitors operational points until all is settled.

What's with the clicking noises when I turn the volume?

That's the sound of the mechanical relays in the relay-switched stepped attenuator. Also normal.

What kind of tubes can I use in Lyr+?

Use only 6SN7-type tubes, including 6N8S, 5692, and (of course) 6SN7.

Can I leave Lyr+ on all the time?

You can, but it would be best to do it when in solid state mode (no tube inserted). The tube heater is on all the time, in all modes, and leaving it powered on all the time will significantly shorten the tube lifespan.

The Lyr+ clicks and I don't hear any music, then it clicks back on, then click and no music, over and over again.

Aha! We bet you're using a TRRS jack (typically found on headphones with microphones) that has been "converted" to 1/4" using an adapter. This can short the outputs, forcing Lyr+ to protect itself. If you want to use a TRRS headphone, we sell a proper conversion kit here: schiit.com/trrs

It doesn't turn on, what do I do?

Plug it in to a different AC socket. Ensure you are not currently in a blackout. Then email us if it still doesn't work.

WARRANTY

Schiit Audio warrants to the original purchaser that the product shall be free from defects in material and workmanship for five (5) years from the date of purchase. Exceptions: tubes and remote controls. Tubes are covered by a 90-day limited warranty with the same terms. Remote controls are covered by a 1-year warranty with the same terms. If a defect covered by this warranty occurs during this warranty period, Schiit Audio will repair the defective product, free of charge. Date of purchase will be based on customer-submitted receipts, otherwise date of manufacturing will be used to determine warranty period.

If you believe you need warranty service, CONTACT US first. There may be a simple solution to your problem. Schiit Audio products sent back to us without a RETURN AUTHORIZATION (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@schiit.com. We will respond quickly to either phone or email messages.

WARRANTY LIMITATIONS

THIS WARRANTY SHALL NOT APPLY IF THIS PRODUCT: (a) IS MODIFIED OR TAMPERED WITH; (b) IS DAMAGED BY NEGLIGENCE, ACCIDENT, UNREASONABLE USE, COFFEE, OR BY OTHER CAUSES UNRELATED TO DEFECTIVE MATERIALS OR WORKMANSHIP; OR (c) HAS HAD THE SERIAL NUMBER ALTERED, DEFACED OR REMOVED.

ANY APPLICABLE IMPLIED WARRANTIES, INCLIDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HERBY LIMITED IN DURATION TO THE WARRANTY PERIOD (5 YEARS). IN NO EVENT SHALL SCHIIT AUDIO BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM THE BREACH OF ANY IMPLIED OR EXPRESS WARRANTIES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSION OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state or province to province.

Application for Council Directives 72/23/EEC Conformity declared for EN60065, EN50082-1



