


MODI 3+ DIGITAL TO ANALOG CONVERTER

IN NORSE MYTHOLOGY, MODI WAS ONE OF THOR'S SONS. HERE, MODI 3+ IS A DO-ALL UNISON USB $^{\rm M}$ AND SPDIF DAC. IT'S ARGUABLY ALL THE DAC YOU'LL EVER NEED, AND IT DOES IT ALL AT A 2-FIGURE PRICE TAG! JUST PLUG IT IN AND ENJOY.

OWNER'S MANUAL

CONNECTIONS

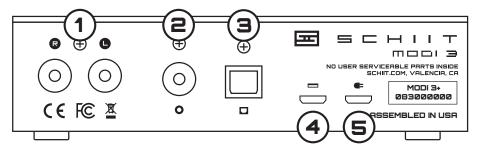


- **1 RCA Analog Outputs.** Connect the two RCA jacks, to your amp, preamp, or receiver.
- **2 Coaxial Digital Input.** Connect a coaxial digital source, using an RCA cable, 75 ohm preferred.
- **3 Optical Digital Input.** Connect an optical source to the optical input jack, using a Toslink cable.
- **4 USB Data and Power Input.** Connect a USB source using a USB micro cable (supplied).
- **5 Power Input.** Connect a 5V power source to this if you need external power. See "Operation."

OPERATION

If you're using Modi 3+ as a USB only DAC, you don't need Power Input. Just connect it to your computer with the supplied USB Micro cable and you're set.

If you're using the other digital inputs, and you're NOT using USB, you need Power Input. Connect the supplied USB wall-wart with the supplied USB Micro cable to provide power for the other inputs. Modi 3+ won't work without power, and power comes from USB.

CONTROLS

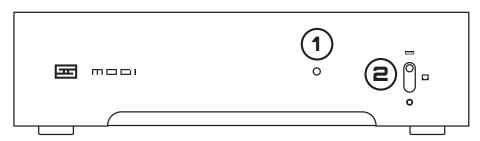

- **1 Power LED.** This lights up when you have Modi 3+ plugged into a computer, or into an external power source. It doesn't signal UFOs or anything.
- **2 Input Selector.** Use the toggle switch to select what you want to listen to.

Top: Unison USB™ input Middle: Optical (Toslink) input

Bottom: Coaxial input

Pretty straightforward, right?

TROUBLESHOOTING

"Draws too much power" error. You'll need to use additional power. Disconnect Modi 3+ from your source, then connect the wall-wart to the Power Input using the USB Micro cable. The Modi 3+ will then report as a 0mA USB device. You'll need another cable to connect to your source.

No sound? Make sure Modi 3+ is selected in Control Panel (Windows) or System Prefs (Mac) AND in your player software.

2-YEAR LIMITED WARRANTY

Schiit Audio warrants to the original purchaser that this product shall be free from defects in material and workmanship for two (2) years from the date of purchase. If a defect covered by this warranty occurs during this period, Schiit Audio will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. Schiit Audio products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@schiit.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonably use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall Schiit Audio be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some states do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.

Œ

Application for Council Directives 72/23/EEC, 89/336 EEC Conformity declared for EN60065, EN55022 Class B, EN50082-1



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

IN THE BOX

- (1) Modi 3+
- (1) 5V USB Wall-Wart
- (1) USB Micro Cable



SCHIIT.COM INFO@SCHIIT.COM