 
 


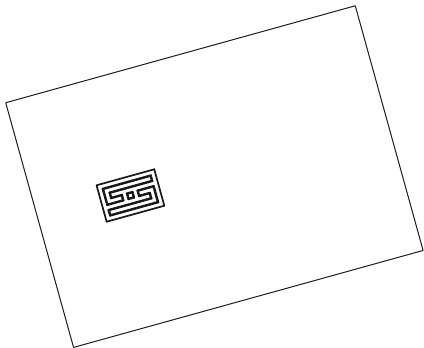

moio

MESH™ DAC

CONNECTIONS

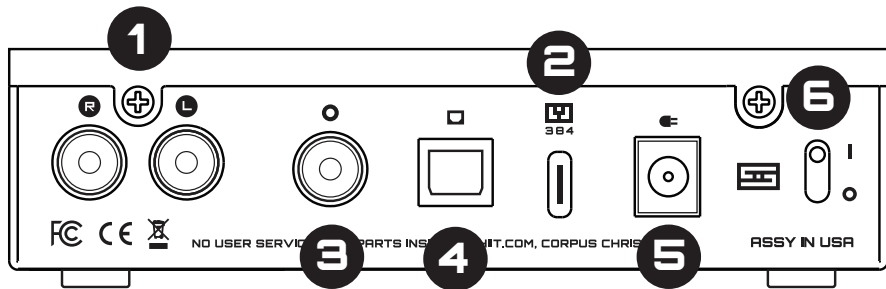

1 Connect the two RCA jacks to your amp, preamp, or receiver.

2 Connect a USB source. Use a USB-C terminated cable. If you're only using USB, that may be all you need.

3 (Optional) Connect a coaxial digital source to the coaxial input, using an RCA cable, 75 ohm preferred.

4 (Optional) Connect an optical source to the optical input jack, using a Toslink cable.

5 (Optional*) Connect our 16VAC wall-wart for Linear Override, which gives you higher output and increased performance, as well as 0mA power draw from USB.

6 Turn it on using the power switch. It's ok to leave it on all the time, or turn it on and off as you use it.

*If you're using optical or coaxial digital inputs, and you're NOT using USB, you need the 16VAC wall-wart. Note that DC wall-warts won't work. Use ours. It works.

1 Select input by pressing the input button.

This selects from three inputs—USB, optical, and coaxial.

2 Indicates Unison 384™ input. This is good for computers, tablets, streamers, and phones.

 
3 Indicates Optical (Toslink style) input. Typically used with TVs.

4 Indicates Coaxial input. Used with some CD players and transports.

TROUBLESHOOTING

“Draws too much power” error? You’ll need the 16VAC wall-wart. Turn Modi 5 off and connect the wall-wart. Modi will then report as a 0mA USB device.

No sound? Make sure you have the correct output device selected on your device. For computers, you may need to select Modi+ in both Control Panel (Windows) or System Prefs (Mac) AND in your player software or streaming service interface.

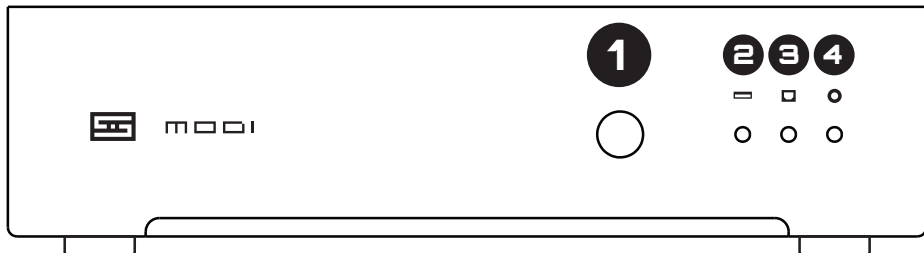

- (1) Modi 5
 (1) 16VAC
 wall-wart (if
 you ordered it)
 (1) USB A-C
 Cable

(And maybe some stickers,
 and the appreciation of
 the production, QC, and
 engineering staff at Schiit.)



1. If you don't know how to install audio devices, get a qualified professional to help.
2. Never use this device near water, do not expose to rain or moisture, and clean only with a dry cloth.
3. Assure adequate ventilation, do not block ventilation openings, or place near heat sources.
4. Use only the supplied wall-wart or suitable replacement. Route cords away from traffic areas and protect them from being pinched. Unplug the wall-wart from the outlet if the apparatus is unused for a long period of time.
5. To prevent electric shock, do not use the plug with an extension cord, receptacle, or outlet unless blades can be fully inserted.
6. Refer all servicing to qualified service personnel. Service is required when the device has been damaged, including cord or plug damage, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Schiit Audio warrants to the original purchaser that this product shall be free from defects in material and workmanship for two (2) years from the date of purchase. If a defect covered by this warranty occurs during this period, Schiit Audio will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. Schiit Audio products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@schitt.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonable use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall Schiit Audio be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some states do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.



This product is in compliance with standards and regulations of the European Community.

SCHIIT.COM
 INFO@SCHIIT.COM

