

REHRR

DESKTOP SPEAKER AMP



1 Connect your source to the Rekkr's "IN" RCA jacks with high-quality RCA cables. "Source" is a fancy word for headphone amp or, preamp, or any other device that has volume-controlled audio output.

2 Connect the supplied wall-wart cable to the jack labeled "AC IN." Do not use any other wall-wart, or Rekkr will not work.*

3 Stereo: Connect the speakers to the "L" and "R" outputs using banana plugs. Ensure that the two switches on the bottom are not set to "MONO." 4 Mono: using the right RCA input only, connect the speaker to the two middle outputs with banana plugs. Ensure the two switches on the bottom are set to "MONO."

5 Turn on and off the power with the power switch. Up is on. Down is off.

6 Make sure the Mono switches are set correctly. Both towards "MONO" for mono, both away from "MONO" for stereo.

*Rekkr's wall-wart is AC output. Most AC adapters are DC output, and will not work with Rekkr. Rekkr works with a 6VAC, 2-4A output adapter only.

OPERATION

1 Turn it on. The front LED will light up, and the relay will click in after about 10 seconds. Then you'll have music!

2 Control volume with your headphone amp or preamp. You need a source with a volume control. Don't turn it up until it distorts, or until your ears bleed.

			Ω	
	\bigcirc		NOUDER BERVICEABLE OUI234567 C C Z SCHIT-COM, CORPUS CHRISTL TX RSSY IN USR	\bigcirc
6		0)	
	\bigcirc			\bigcirc

PROTECTION

If your Rekkr clicks and mutes, clicks and mutes, over and over, it is protecting itself from over-current or over-temperature situations.

Protection will happen when your speaker cables are shorted or if there is a fault in your speakers. Check your cables and

speakers for shorts, and try different speakers.

You may also encounter protection when playing Rekkr loudly for some time, or when using low-impedance, low-efficiency speakers. Remember, Rekkr is a relatively low-powered amp, designed for desktop and nearfield use. (1) Rekkr (1) Wall-Wart 6VAC, 2A

(And maybe some stickers, and the appreciation of the production, QC, and engineering staff at Schiit Audio in Texas and California.)



SAFETY

1. If you don't know how to install audio devices, get a qualified professional to help.

2. Never use this device near water, do not expose to rain or moisture, and clean only with a dry cloth.

3. Assure adequate ventilation, do not block ventilation openings, or place near heat sources.

4. Use only the supplied wall-wart or suitable replacement. Route cords away from traffic areas and protect them from being pinched. Unplug the wall-wart from the outlet if the apparatus is unused for a long period of time.

To prevent electric shock, do not use the plug with an extension cord, receptacle, or outlet unless blades can be fully inserted.

6. Refer all servicing to qualified service personnel. Service is required when the device has been damaged, including cord or plug damage, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Schiit Audio warrants to the original purchaser that this product shall be free from defects in material and workmanship for two (2) years from the date of purchase. If a defect covered by this warranty occurs during this period, Schiit Audio will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. Schiit Audio products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@schiit.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonable use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall Schiit Audio be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some states do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province.

SCHIIT.CON INFO@SCHIIT.CON

